



Installation

Sling suspension


1

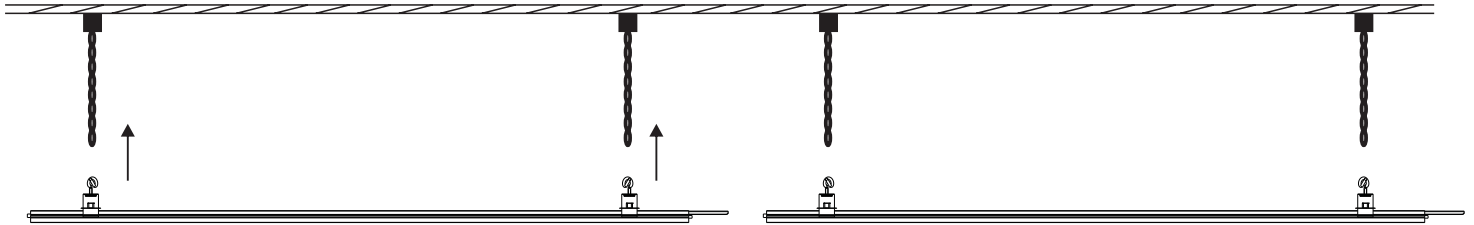


2

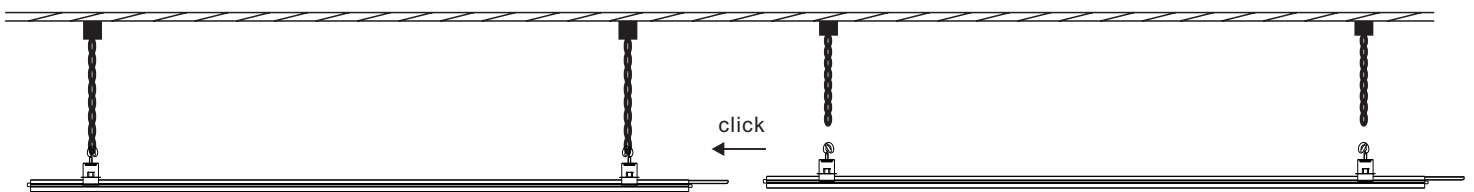


3

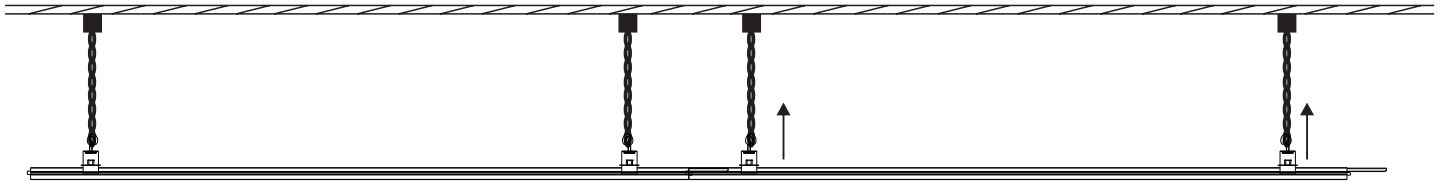


4

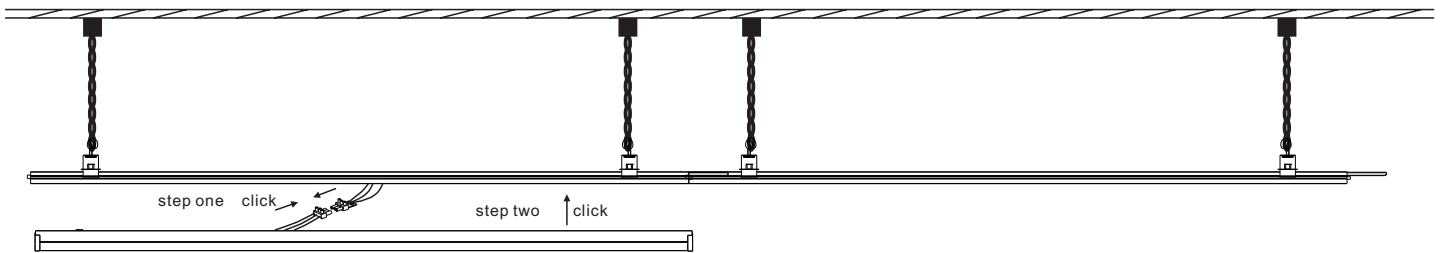


5

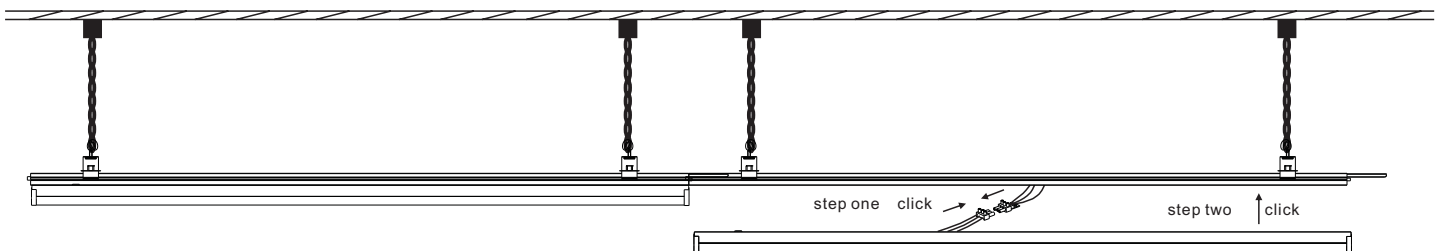


6 Connecting AC wire to the female connector

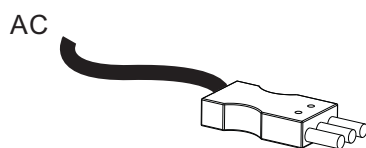

7

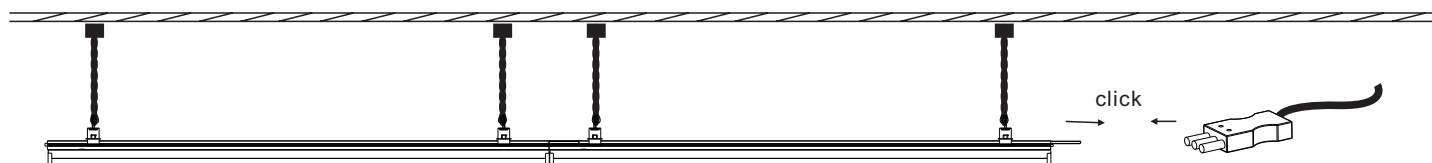

8

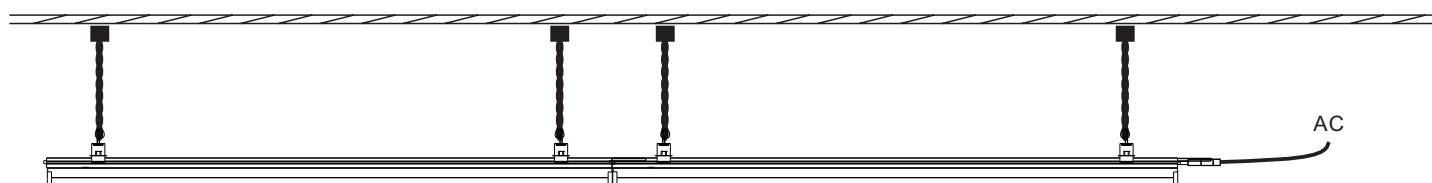


! WARNING

High voltage inside.
Service by trained
personnel only.



! Notes:

- Operation and storage of the luminaire must be within rated temperature and humidity .Operate within the rated input voltage.
- Keep away from strong electromagnetic radiation source and lightning strike.
- Should the unit malfunction,return to distributor or reseller.No user serviceable part inside .Risk of electric shock,don't disassemble or attempt to repair the luminaire .
- Do not install or use luminaire if the casing is found to be broken.
- The luminaire must be installed by qualified electrician.
- Luminaire should be far away from heat, vibration source and should avoid contact with any corrosive chemical .
- Never cover the luminaire with heat insulating material.
- Always turn off power before installation and replacement.

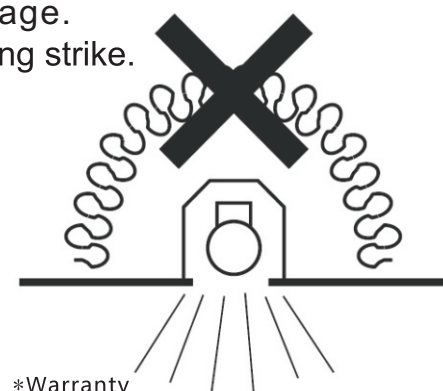

*Warranty
For more information, please contact
the local distributor.